Chapter 2

Instructions: Language of the Computer

Fall 2018
Soontae Kim
School of Computing
KAIST

MIPS I-format Instructions

op	rs	rt	constant or address
6 bits	5 bits	5 bits	16 bits

- Immediate arithmetic and load/store instructions
  - rt: destination or source register number
  - Constant: -2^{15} to $+2^{15} - 1$
  - Address: offset added to base address in rs
- *Design Principle 4:* Good design demands good compromises
  - Different formats complicate instruction decoding, but allow 32-bit instructions uniformly
  - Keep formats as similar as possible

MIPS instructions and encoding

MIPS machine language

Name	Format	Example						Comments
add	R	0	18	19	17	0	32	add `$s1,$s2,$s3`
sub	R	0	18	19	17	0	34	sub `$s1,$s2,$s3`
addi	I	8	18	17	100			addi `$s1,$s2,100`
lw	I	35	18	17	100			lw `$s1,100($s2)`
sw	I	43	18	17	100			sw `$s1,100($s2)`
Field size		6 bits	5 bits	5 bits	5 bits	5 bits	6 bits	All MIPS instructions are 32 bits long
R-format	R	op	rs	rt	rd	shamt	funct	Arithmetic instruction format
I-format	I	op	rs	rt	address			Data transfer format

FIGURE 2.6 MIPS architecture revealed through Section 2.5. The two MIPS instruction formats so far are R and I. The first 16 bits are the same: both contain an *op* field, giving the base operation; an *rs* field, giving one of the sources; and the *rt* field, which specifies the other source operand, except for load word, where it specifies the destination register. R-format divides the last 16 bits into an *rd* field, specifying the destination register; the *shamt* field, which Section 2.6 explains; and the *funct* field, which specifies the specific operation of R-format instructions. I-format combines the last 16 bits into a single *address* field.

Stored Program Computers

The BIG Picture

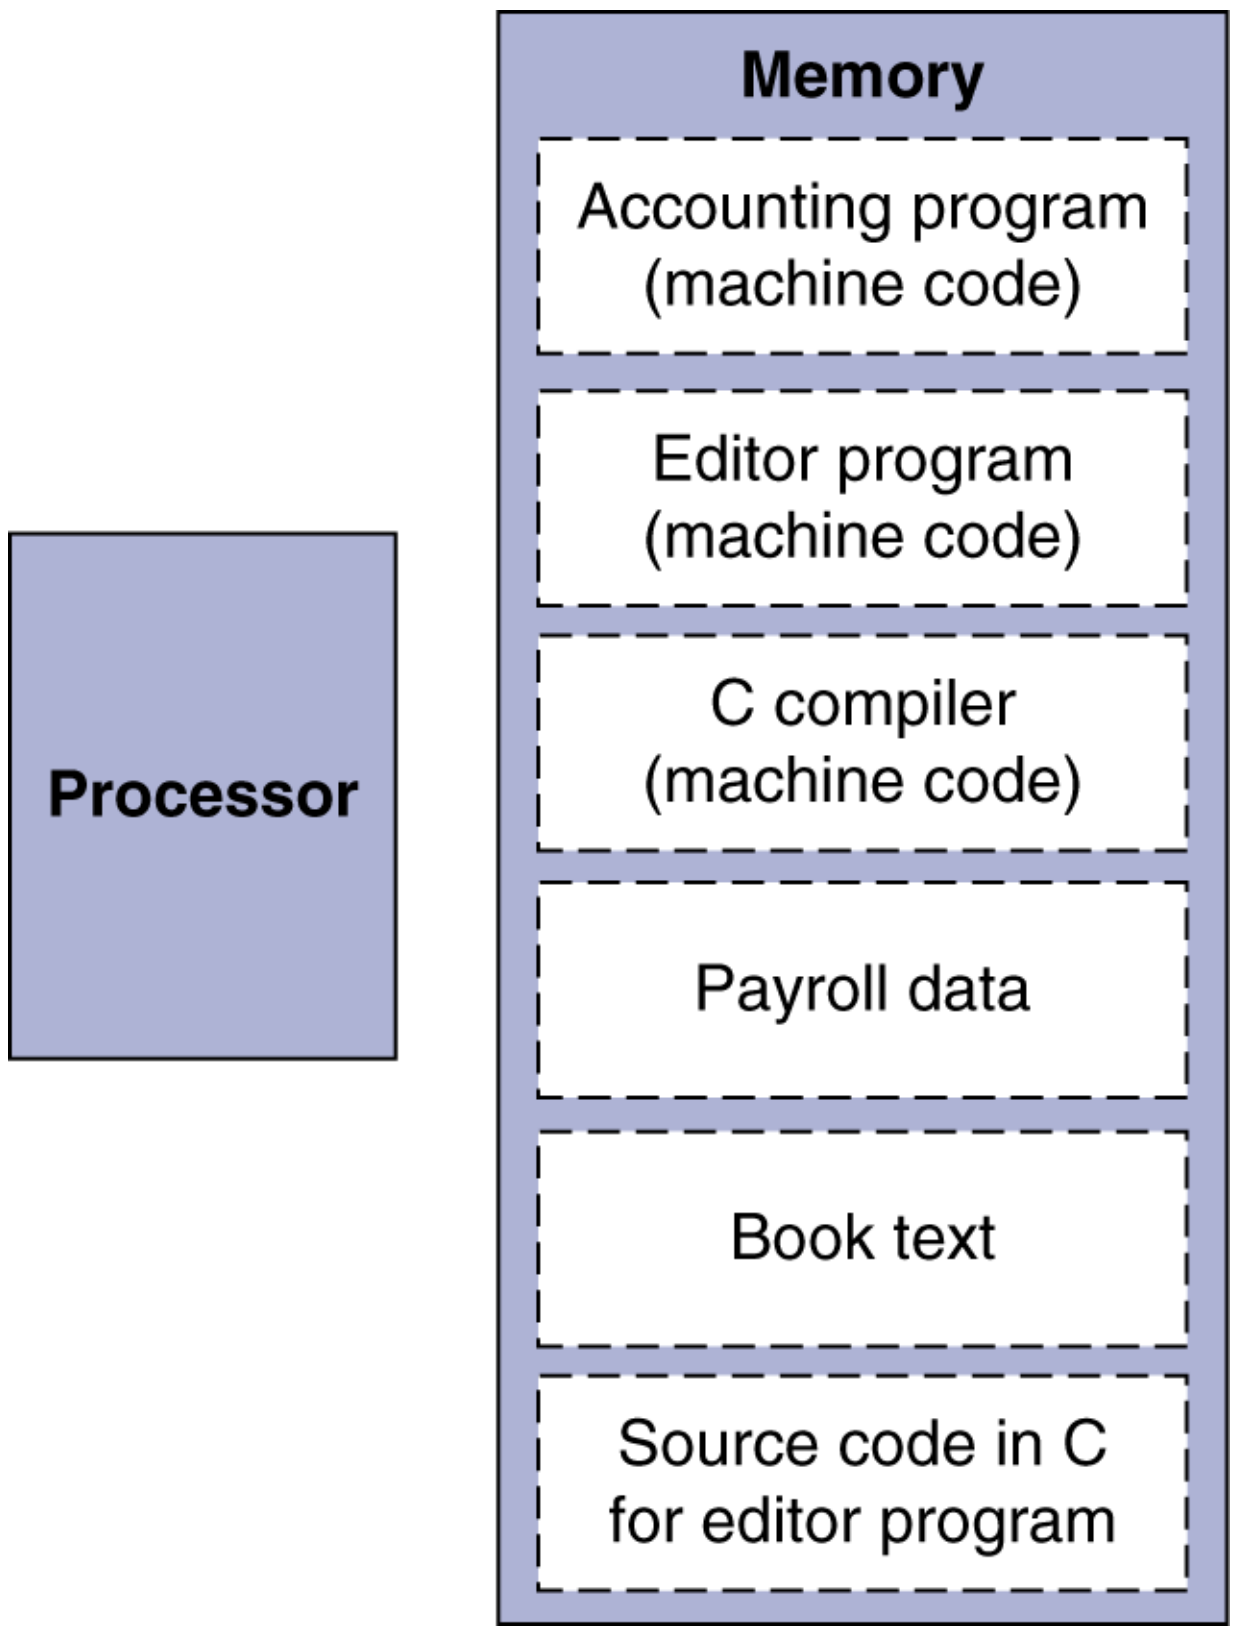

- Instructions represented in binary, just like data
- Instructions and data stored in memory
- Programs can operate on programs
  - e.g., compilers, linkers, …
- Binary compatibility allows compiled programs to work on different computers
  - Standardized ISAs

Logical Operations

- Instructions for bitwise manipulation

<table>
<tr><th>Operation</th><th>C</th><th>Java</th><th>MIPS</th></tr>
<tr><td>Shift left</td><td><<</td><td><<</td><td><code>sll</code></td></tr>
<tr><td>Shift right</td><td>>></td><td>>>></td><td><code>srl</code></td></tr>
<tr><td>Bitwise AND</td><td>&</td><td>&</td><td><code>and, andi</code></td></tr>
<tr><td>Bitwise OR</td><td>|</td><td>|</td><td><code>or, ori</code></td></tr>
<tr><td>Bitwise NOT</td><td>~</td><td>~</td><td><code>nor</code></td></tr>
</table>

- Useful for extracting and inserting groups of bits in a word

Shift Operations

op	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

- shamt: how many positions to shift
- Shift left logical
  - Shift left and fill with 0 bits
  - `sll` by *i* bits multiplies by 2^i
- Shift right logical
  - Shift right and fill with 0 bits
  - `srl` by *i* bits divides by 2^i (unsigned only)

AND Operations

- Useful to mask bits in a word
  - Select some bits, clear others to 0

```
and $t0, $t1, $t2
```

\$t2	0000 0000 0000 0000 0000 1101 1100 0000
\$t1	0000 0000 0000 0000 0011 1100 0000 0000
\$t0	0000 0000 0000 0000 0000 1100 0000 0000

OR Operations

- Useful to include bits in a word
  - Set some bits to 1, leave others unchanged

```
or $t0, $t1, $t2
```

\$t2	0000 0000 0000 0000 0000 1101 1100 0000
\$t1	0000 0000 0000 0000 0011 1100 0000 0000
\$t0	0000 0000 0000 0000 0011 1101 1100 0000

NOT Operations

- Useful to invert bits in a word
  - Change 0 to 1, and 1 to 0
- MIPS has NOR 3-operand instruction
  - a NOR b == NOT (a OR b)

```
nor $t0, $t1, $zero
```

Register 0: always read as zero

\$t1	0000 0000 0000 0000 0011 1100 0000 0000
\$t0	1111 1111 1111 1111 1100 0011 1111 1111

Conditional Operations

- Branch to a labeled instruction if a condition is true
  - Otherwise, continue sequentially
- `beq rs, rt, L1`
  - if (rs == rt) branch to instruction labeled L1;
- `bne rs, rt, L1`
  - if (rs != rt) branch to instruction labeled L1;
- `j L1`
  - unconditional jump to instruction labeled L1

Compiling If Statements

- C code:

```
if (i==j) f = g+h;
else f = g-h;
```

  - f, g, … in $s0, $s1, …

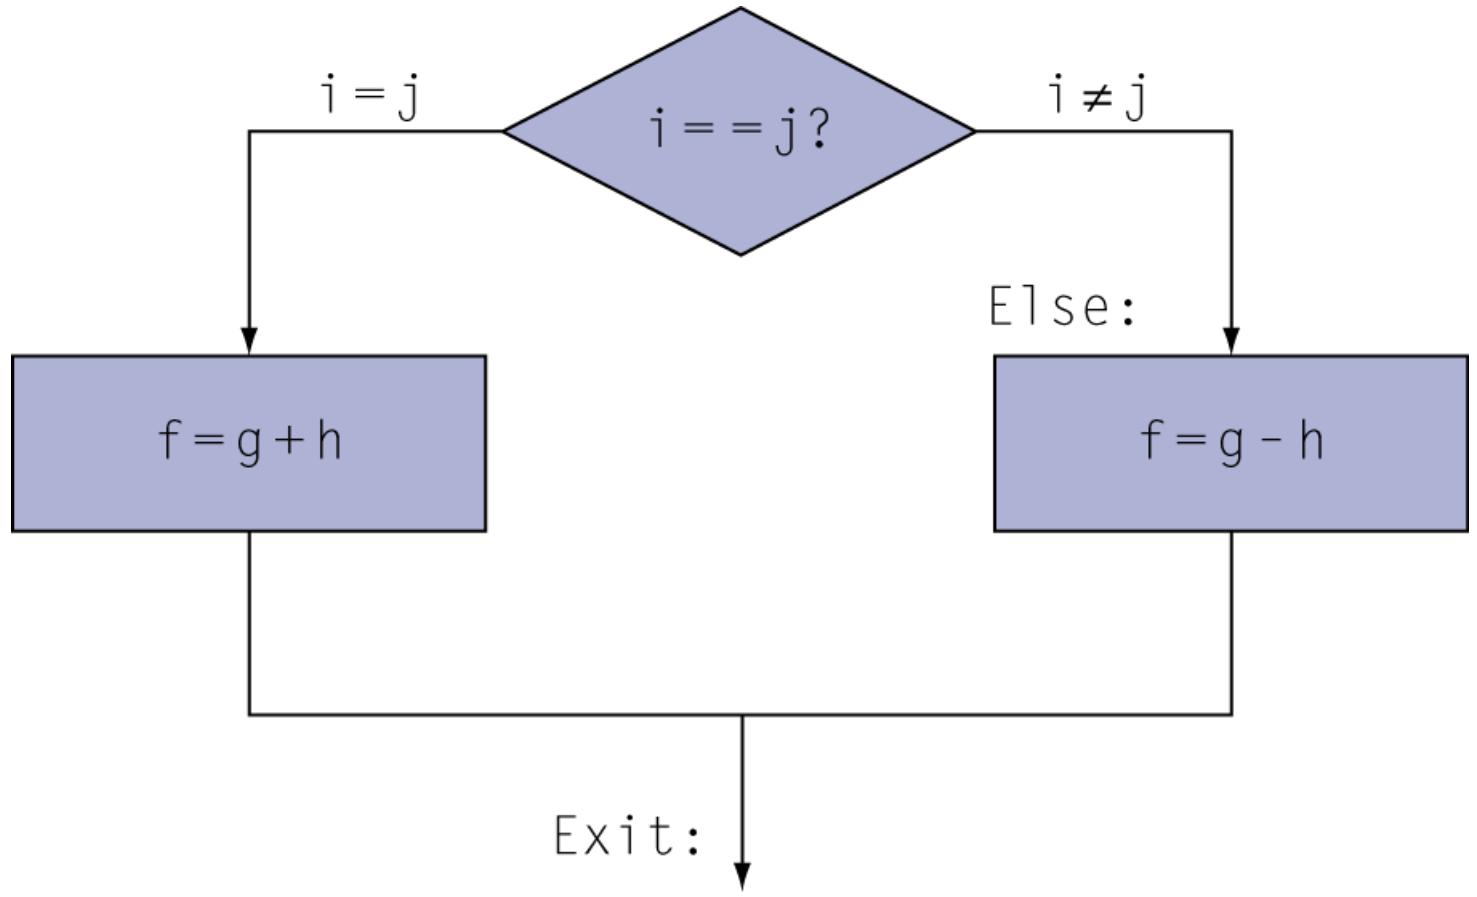

- Compiled MIPS code:

```
      bne $s3, $s4, Else
      add $s0, $s1, $s2
      j   Exit
Else: sub $s0, $s1, $s2
Exit: …
```

Assembler calculates addresses

Compiling Loop Statements

- C code:

```
while (save[i] == k) i += 1;
```

  - i in $s3, k in $s5, address of save in $s6
- Compiled MIPS code:

```
Loop: sll  $t1, $s3, 2
      add  $t1, $t1, $s6
      lw   $t0, 0($t1)
      bne  $t0, $s5, Exit
      addi $s3, $s3, 1
      j    Loop
Exit: …
```

Basic Blocks

- A basic block is a sequence of instructions with
  - No embedded branches (except at end)
  - No branch targets (except at beginning)

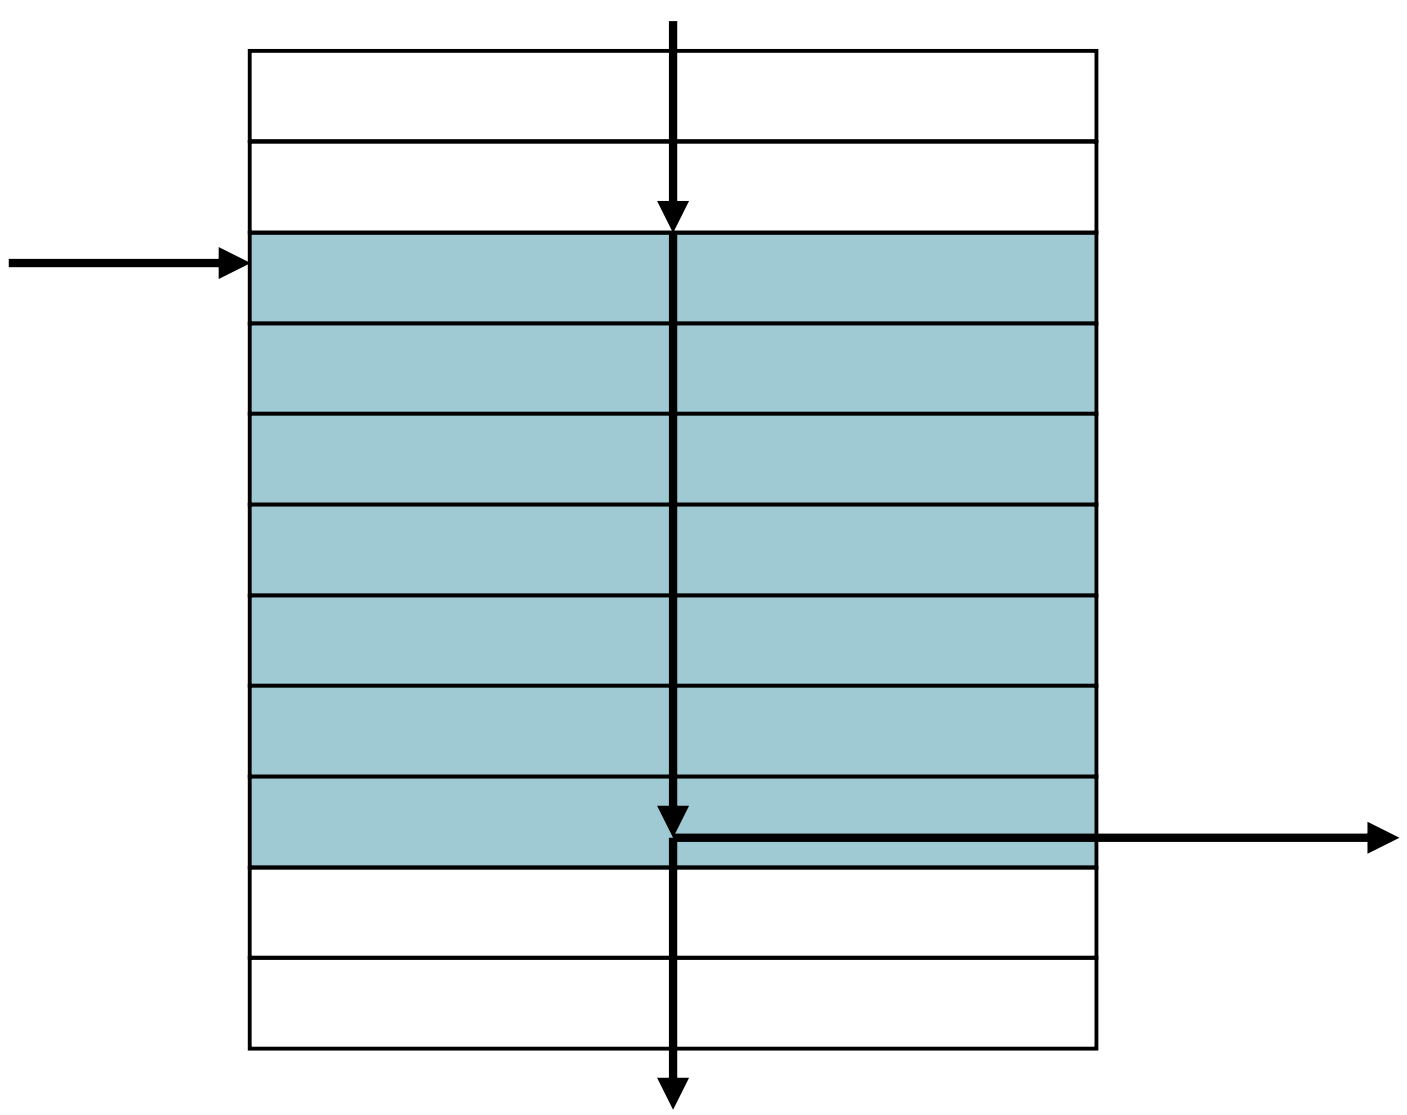

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks

More Conditional Operations

- Set result to 1 if a condition is true
  - Otherwise, set to 0
- `slt rd, rs, rt`
  - if (rs < rt) rd = 1; else rd = 0;
- `slti rt, rs, constant`
  - if (rs < constant) rt = 1; else rt = 0;
- Use in combination with beq, bne

```
slt $t0, $s1, $s2  # if ($s1 < $s2)
bne $t0, $zero, L  #   branch to L
```

Branch Instruction Design

- Why not `blt`, `bge`, etc?
- Hardware for <, ≥, … slower than =, ≠
  - Combining with branch involves more work per instruction, requiring a slower clock
  - All instructions penalized!
- `beq` and `bne` are the common case
- This is a good design compromise

Signed vs. Unsigned

- Signed comparison: `slt`, `slti`
- Unsigned comparison: `sltu`, `sltui`
- Example
  - \$s0 = 1111 1111 1111 1111 1111 1111 1111 1111
  - \$s1 = 0000 0000 0000 0000 0000 0000 0000 0001
  - `slt  $t0, $s0, $s1  # signed`
    - $-1 < +1 \Rightarrow$ \$t0 = 1
  - `sltu $t0, $s0, $s1  # unsigned`
    - $+4{,}294{,}967{,}295 > +1 \Rightarrow$ \$t0 = 0

Procedure Calling

- Steps required
  1. Place parameters in registers
  2. Transfer control to procedure
  3. Acquire storage for procedure
  4. Perform procedure's operations
  5. Place result in register for caller
  6. Return to place of call

Register Usage

- $a0 – $a3: arguments (reg's 4 – 7)
- $v0, $v1: result values (reg's 2 and 3)
- $t0 – $t9: temporaries
  - Can be overwritten by callee
- $s0 – $s7: saved
  - Must be saved/restored by callee
- $gp: global pointer for static data (reg 28)
- $sp: stack pointer (reg 29)
- $fp: frame pointer (reg 30)
- $ra: return address (reg 31)

Procedure Call Instructions

- Procedure call: jump and link

  `jal ProcedureLabel`

  - Address of following instruction put in $ra
  - Jumps to target address
- Procedure return: jump register

  `jr $ra`

  - Copies $ra to program counter
  - Can also be used for computed jumps
    - e.g., for case/switch statements

Leaf Procedure Example

- C code:

```
int leaf_example (int g, h, i, j)
{ int f;
  f = (g + h) - (i + j);
  return f;
}
```

  - Arguments g, …, j in $a0, …, $a3
  - f in $s0 (hence, need to save $s0 on stack)
  - Result in $v0

Leaf Procedure Example

- MIPS code:

`leaf_example:`	
`addi $sp, $sp, -4` `sw   $s0, 0($sp)`	Save $s0 on stack
`add  $t0, $a0, $a1` `add  $t1, $a2, $a3` `sub  $s0, $t0, $t1`	Procedure body
`add  $v0, $s0, $zero`	Result
`lw   $s0, 0($sp)` `addi $sp, $sp, 4`	Restore $s0
`jr   $ra`	Return

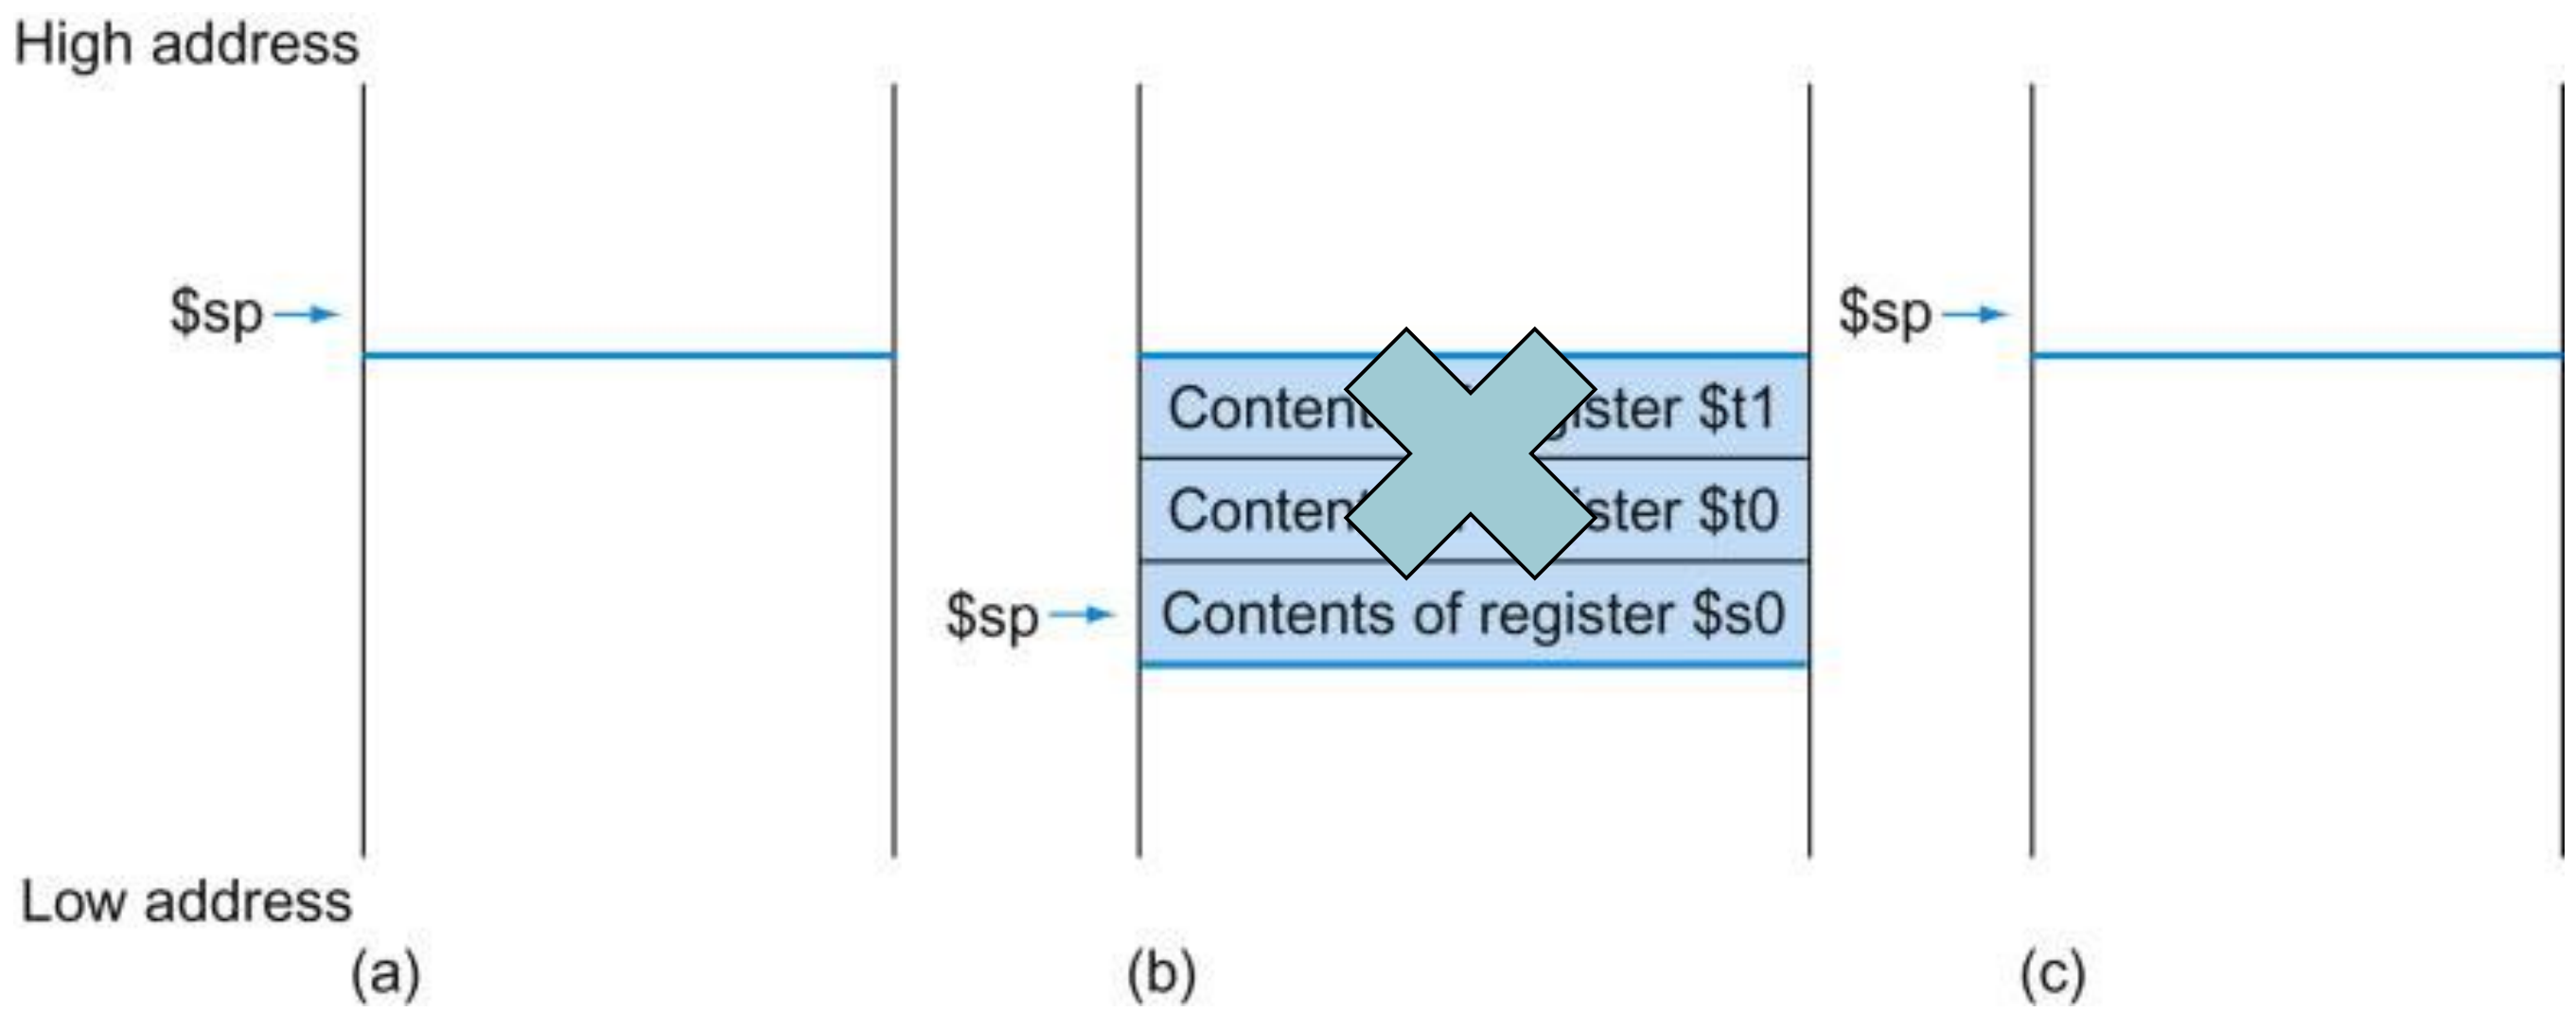

FIGURE 2.10 The values of the stack pointer and the stack (a) before, (b) during, and (c) after the procedure call. The stack pointer always points to the "top" of the stack, or the last word in the stack in this drawing.

Since $t0 and $t1 are temporary registers, we can drop two stores and two loads.